

4-Channel Wireless Keypad

This is a 4-Channel keypad which can only be activated after entering the correct password.

Transmission range: 200m (line of sight)

Battery life: approx. 2 years (10 operations/day)

Operation

Enter the password ("8888" from factory) then press "▶", a long "beep" will sound from the keypad. It is now in operation mode. If incorrect password has been entered, keypad will give out 5 short "beeps".

Once in operation mode, press either "1", "2", "3" or "4" to operate that specific channel.

If no button is pressed while in operation mode for 5 seconds, the keypad will automatically leave operation mode and revert to power saving standby mode.

Sound	Meaning
1 short beep	Keypad tone (normal operation)
1 long beep	Correct tone (password correct, password change confirmed)
5 short beeps	Error tone (password is incorrect, password change failure)
1 low beep	Battery low

Changing the Password

Factory password is "8888".

Enter current password and press "▶" to enter operation mode.

Within 5 seconds, press the "◀" and "▶" buttons at the same time and a long "beep" will sound from the keypad.

Within 5 seconds, enter the new password (up to 8 digits long) then press "▶".

Within 5 seconds, re-enter the new password then press "▶", a long "beep" will sound from the keypad to confirm password has been changed.

