4 Channel





DESCRIPTION

This four channel keyring transmitter is a light weight transmitter that is small enough to fit on your car keyring.

The four channels allow for use on multiple garage doors.

SPECIFICATIONS

FREQUENCY 433MHz

CODE TYPE

Smart button technology - each with pre-programmed buttons.

CHANNELS

4 available channels per programmed transmitter (all with smart button technology)

KIT CONTAINS

1 x transmitter 1 x 12 Volt Alkaline battery

HOW TO

HOW TO PROGRAM INTO THE OPENER

Make sure to install the battery in the transmitter correctly.

1. Press and hold the blue Door Code button on the opener or SW1 or SW2 on the receiver board.

2. Press the transmitter button for two seconds.

3. Release and pause for two seconds. Press the same button again for two seconds.

4. Release the Door Code or SW button.

5. Press the transmitter button to test operation of the door/gate etc.

HOW TO ERASE MY TRANSMITTER CODES

- 1. Turn the power off to the opener.
- 2. Press and hold Door Code or SW1 button.

3. Turn the power on again, while holding the button. The Coding LED will illuminate to indicate that the receiver's memory has been deleted.

4. Release the button. All the stored codes including the courtesy light codes should now be deleted. Confirm this by pressing the transmitters previously used to operate the device. There should be no response.

NOTE: This will erase all codes, you cannot erase just one code.