4 Channel BENINCA - TRANSMITTER



CODE TYPE

Smart button technology - each with pre-programmed buttons.

CHANNELS

4 available channels per programmed transmitter (all with smart button technology)

KIT CONTAINS

 
1 x transmitter 1 x 12 Volt Alkaline battery

Coding using an existing remote

- 1. With a sharply pointed object, press the hidden button on the back of your already-programmed remote control or press the hidden button found next to the battery in the inside of your remote control or press the hidden button found next to the battery in the inside of your remote control. Let it go.
- 2. The LED light of your already- programmed remote control illuminates. Wait 5 seconds. The LED light of your already-programmed remote control turns off.
- 3. During the next 10 seconds, press a button on your new remote control. Let it go.
- 4. Wait 10 seconds
- 5. Your new remote control is programmed.







Coding directly to the receiver

- 1. Open the casing of your receiver. It is located next to your motor.
- 2. On the receiver circuit board, press the programming button (PGM). The LED light of the receiver illuminates. Let the button go.
- 3. In the next 10 seconds, press a button on your new remote control. Let it go.
- 4. Wait 10 seconds.
- 5. Your new remote control is programmed.

