

4 Channel

DEA - TRANSMITTER



CODE TYPE

Smart button technology - each with pre-programmed buttons.

CHANNELS

4 available channels per programmed transmitter (all with smart button technology)


KIT CONTAINS

- 1 x transmitter
- 1 x 12 Volt Alkaline battery

HOW TO PROGRAM YOUR NEW REMOTE

Receiver without a digital screen

1. Open the casing of your receiver box. it can found next to your motor.
2. Press the programming button on the circuit board of the receiver and then let it go (button ENR, MEMO, PROG, or REC, depending on the model).
4. Press a button on your new remote control for one second.
5. Let the button go. The LED light on the receiver goes out immediately or in the following 10 seconds depending on the model.
6. Your new remote control is programmed.

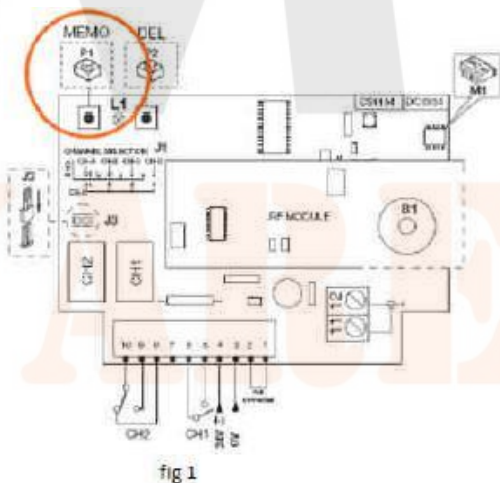

Receiver with a digital screen

1. Open the casing of our receiver box. It can be found next to your motor.
2. Press the buttons + or - on the receiver circuit board until you see the entry P005 on the digital screen.
3. Press OK. The LED lights up.
4. Press a button on your new remote control for one second.
5. Wait 10 seconds.
6. Your new remote control is programmed.

