

4 Channel

Gliderol - TRANSMITTER



CODE TYPE

Smart button technology - each with pre-programmed buttons.

CHANNELS

4 available channels per programmed transmitter (all with smart button technology)

KIT CONTAINS

1 x transmitter
1 x 12 Volt Alkaline battery

DESCRIPTION

This four channel keyring transmitter is a light weight transmitter that is small enough to fit on your car keyring.

The four channels allow for use on multiple garage doors.

HOW TO

HOW TO PROGRAM INTO THE OPENER

Roller Door Openers

1. Carefully remove cover from control box by lifting or unscrewing tab at the bottom
2. Press the red CODE button once
3. A red light will illuminate
4. Press 1 button on the handset once and hold until red light on receiver board turns off. This confirms that the handset is programmed.

Sectional & Tilt Door Openers

1. Undo screw above the Light Cover &/or hinge down the housing
2. Locate & press the CODE button on the receiver. Do not push learn or set.
3. A red light will illuminate
4. Press 1 button on the handset once and hold until red light on receiver board turns off. This confirms that the handset is programmed.
5. Replace housing & secure with screw

SPECIFICATIONS

FREQUENCY

315MHz

SUITS

TM305C

COMPATIBILITY

Glidermatic GRD
Glidermatic GTS
Glidermatic GTS 2000
Glidermatic GTS Optima

HOW TO ERASE TRANSMITTER CODES

Press and hold the CODE button for 12 seconds.

NOTE: This will erase all codes from the memory.