4 Channel Motostar - TRANSMITTER

1. Press and hold the top left button (1) of the remote. LED light will flash quickly. 2. Press and hold the bottom right button (4) of the remote. LED light will start to flash slowly. 3. Release both buttons and the LED will stay solid for 5 seconds. 4. Within 5 seconds, press and hold the button you wish to use. 5. Position the remote you wish to copy from on the target logo at the back of the remote. 6. Press and hold the button you wish to copy from, the LED on the remote will start to flash quickly, then slowly. 7. Release all buttons and test the remote.