


Wiring Connections

Clockwise Rotation

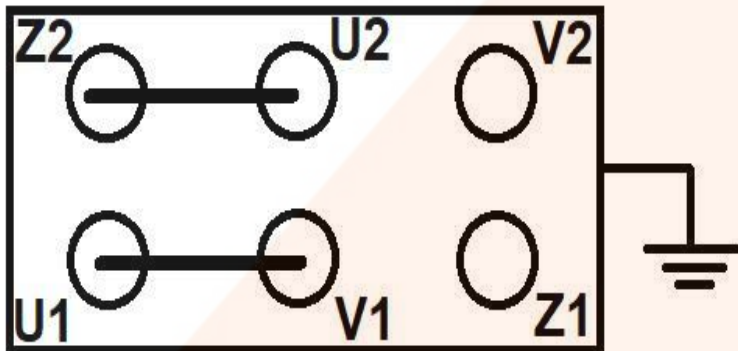

Anti-Clockwise Rotation

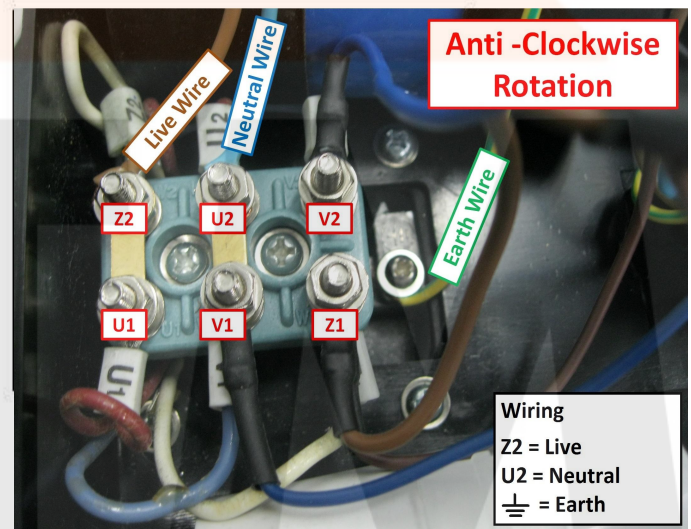
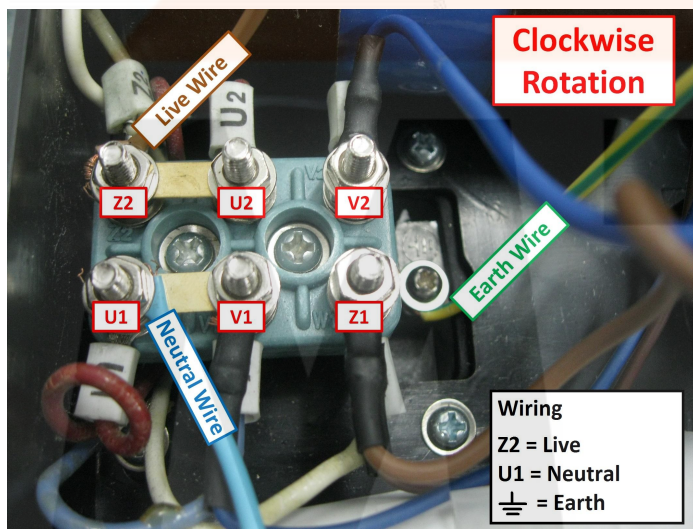
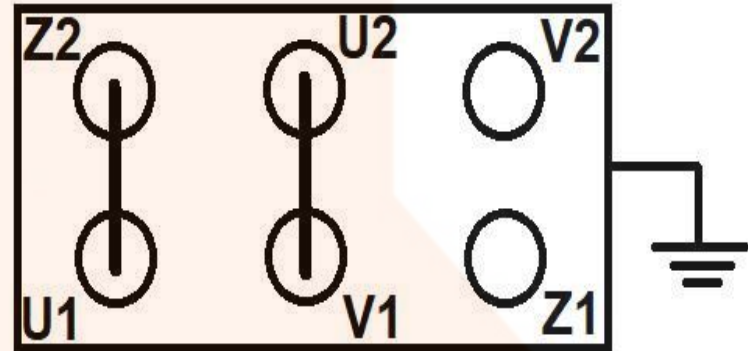


Diagram is also located under the terminal box cap. We recommend contacting an electrician if you are unsure about the wiring.