
Important: Please Read Before Attempting To Install Magnetic Lock

- A.Handle the equipment with care, damaging the mating surfaces of the magnet or armature plate may reduce locking efficiency.
- B.The magnet mounts rigidly to the door frame, the armature plate mounts to the door with hardware. Kit provided that allows it to pivot about its center to compensate for door wear and misalignment.
- C.Template use must take place with door in its normally closed position.
- D.Before installing, please add thread locker to all screws. Firmly tighten screws to avoid fastening loosen.

Typical Installation:

**Important: fix the armature plate not too tightly, and make the rubber washer mor flexible, in order to make the armature plate automatically adjust its proper position with the magnet.

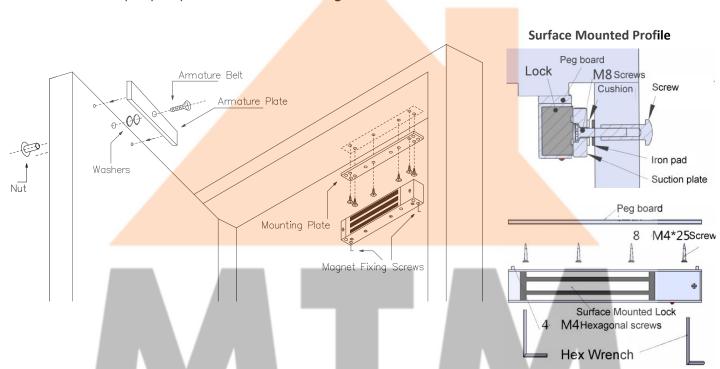

MOUNTING INSTRUCTION

STEP 1

- •FOLD TEMPLATE ALONG DOTTED LINE.
- OPLACE TEMPLATE AGAINST DOOR AND HEAD FRAME.
- •DRILL HOLESAS INDICATED ON TEMPLATE. STEP 2
- ●MOUNT THE ARMATURE PLATE TO DOOR USING 1 RUBBER WASHER SANDWICHED BETWEEN 2 STEEL WASHER(THE RUBBER WASHER AND 2 STEEL WASHER ARE INSTALLED ON THE THROUGH SESNUT BETWEEN THE ARMATURE PLATE AND DOOR). STEP 3
- •INSTALL THE MOUNTING PLATE.
- ●ADJUST THE MOUNTING PLATE SO THAT IT AND THE ARMATUTE PLATE FORM A RIGHT ANGLE.
- ●USING THE MOUNTING PLATE AS A TEMPLATE, DRILL THE WIRE HOLE.
- DRILL AND INSTALL THE REMAINING MOUNTING SCREWS. STEP 4
- ●INSTALL MAGNET TO MOUNTING PLATE WITH 2 M4(M6)SCREWS SUPPLIED. STEP 5
- ●INSTALL ELECTRICAL WIRING PER INSTRUCTION SHEET. STEP 6
- •TESTALL FUNCTIONS OF THIS MODEL(SEE WIRING INSTRUCTION)

Signal Out Diagram

