4 Channel Motostar - TRANSMITTER

1. Press and hold the top left button (1) of the remote. Red LED light will flash quickly. 2. Press and hold the bottom left button (4) of the remote. Red LED light will start to flash slowly. 3. Release both buttons and the LED will stay solid for 5 seconds. 4. Within 5 seconds, press and hold the button you wish to use. 5. Position the remote you wish to copy from on the target logo at the back of the remote. **6.** Press and hold the button you wish to copy from, the LED on the remote will start to flash quickly, then slowly. 7. Release all buttons and test the remote.

Creating a new random Code (If you lose a remote control or don't have a remote to clone from):

Hold down buttons 1 and 4. After 8 seconds, the indicator light will flash rapidly, release the buttons

The 4 buttons now have a new code. Register the remote control on the receiver

Duplicate teh code to all other remote controls by referring to instructions, from Step 1.